


Spare parts list pumps Type S

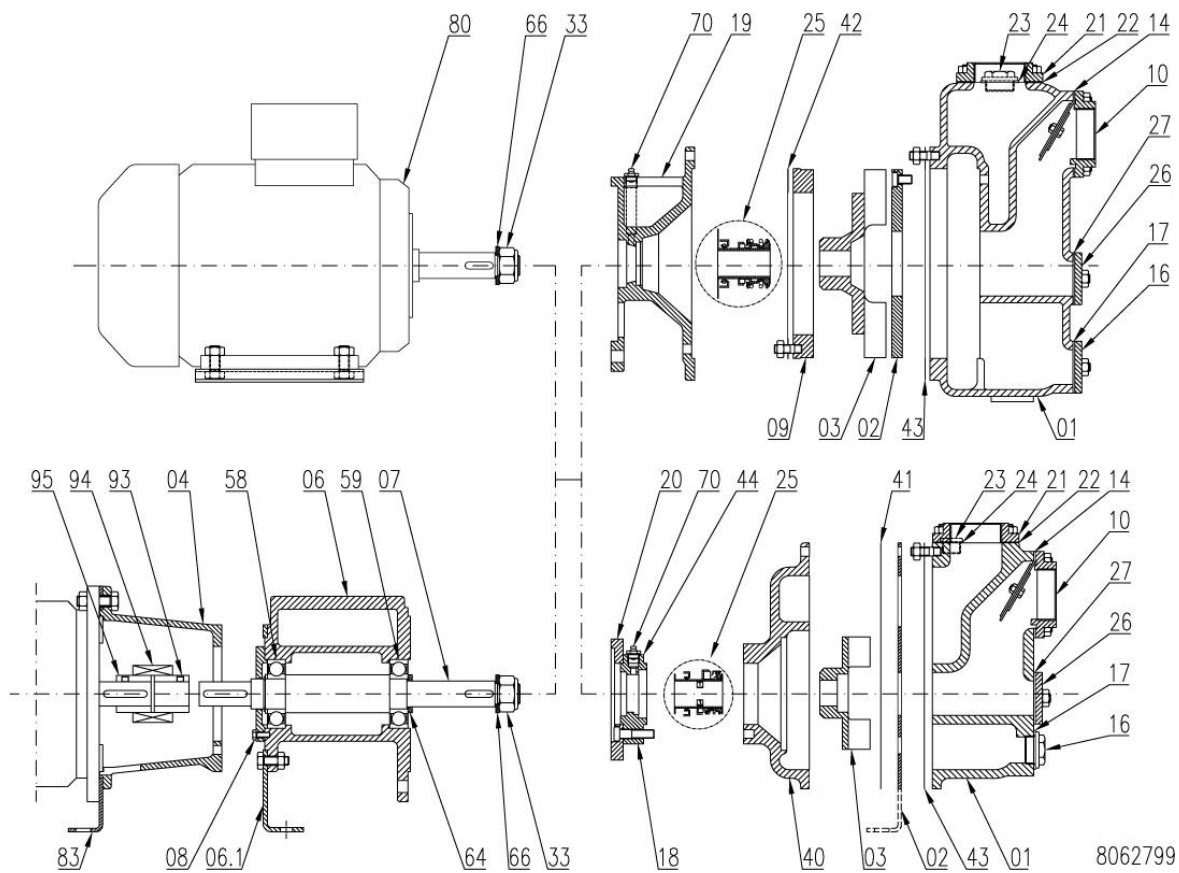

Ref.	Part Name
01	Casing
02	Wear Plate
03	Impeller
04	Bracket
06	Bearing Housing
06.1	Foot, Bearing Housing
07	Shaft
08	Bearing Cover
09	Wear Plate rear (with 42)
10	Suction Valve
14	Check Valve
16	Drain Cover or Plug
17	Gasket (Drain)
18	Seal Box
19	Head
20	Seal box flange
21	Discharge Flange
22	Gasket Discharge Flange
23	Priming Cover or Plug
24	Gasket (Priming)

Ref.	Part Name
25	Mechanical Seal
26	Clean Out Cover
27	Gasket (Clean Out)
33	Nut, Impeller
40	Volute
41	Gasket, Volute
42	Gasket, Wear Plate Rear
43	Gasket, Casing
44	Gasket, Seal Box
58	Ball Bearing, outer
59	Ball Bearing, inner
64	Sleeve, inner
66	Impeller Washer
70	Grease Lubricator
80	Electric Motor (with 33,66)
83	Foot, Bracket
93	Coupling Half
94	Rubber Part
95	Coupling Half
	Gasket set (with 14,17,22,27,41,42,43,44)

